



RFI protection is assumed
 Place RFI filter close
 to input connector with low
 inductance connection to chassis

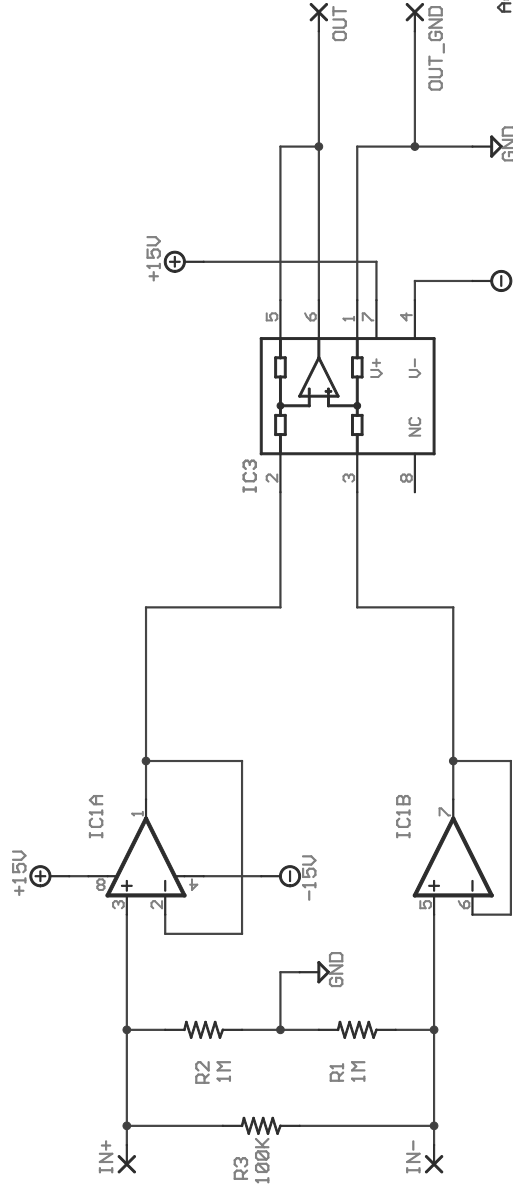

Add resistor or
 damped inductor as
 output isolation if
 driving more than
 a few inches of cable

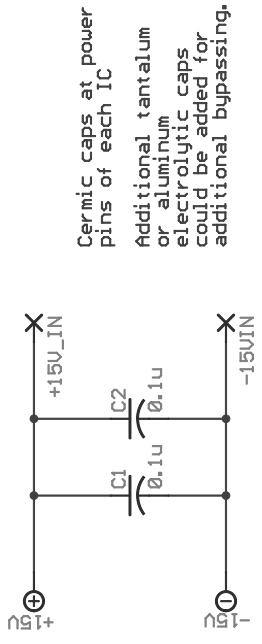

Ceramic caps at power
 pins of each IC
 Additional tantalum
 or aluminum
 electrolytic caps
 could be added for
 additional bypassing.

TITLE: Buffer_DIP

Document Number:

REV:

Date: 4/07/2002 15:13:16

Sheet: 1/1